



ADTECH
Analog-Digital Technology, Inc.

3750 Monroe Avenue
Pittsford, New York 14534-1302
(716) 383-8280 • FAX (716) 383-8386

SCT 302L

Isolated Converter—DC Powered

Instruction Manual

Low Power

1.0 INTRODUCTION

These instructions refer to the above model. Supplementary sheets are attached if the unit has special options or features. For detailed specifications, see page 4 or refer to the Data Bulletin. All ADTECH instruments are factory calibrated and supplied with a label detailing the calibration. Adjustments are normally not necessary. A simple check should be performed to verify calibration before installation to ensure that it matches the field requirement.

2.0 GENERAL DESCRIPTION

The ADTECH SCT 302L is a low power Isolated Signal Transmitter that accepts process input signals such as 4-20 mA dc and converts them into a standard control signal output such as 1-5 vdc or 0-5 vdc.

This model consumes very low power, typically 3.5 mA dc and is specially designed for remote battery or solar-panel-powered applications.

The input is electrically isolated from the output and the power supply by 600 volts ac or 1000 vdc peak. The SCT 302L is powered by 7-42 vdc. The negative rail of the output is common with the negative rail of the dc power supply.

3.0 INSTALLATION

The instrument is supplied in a DIN rail mount general purpose enclosure as standard. NEMA 4 and 7 enclosures are optionally available. Installation area/location must agree with the supplied instruments including operating temperature and ambient conditions.

Electrical Connections

The wire used to connect the instrument to the control system I/O should be a twisted pair(s) and sized according to normal practice. Shielded cable is not normally necessary (if used, the shield must be grounded at the input negative of the ADTECH instrument and left floating at the sensor).

Six position compression terminal blocks are provided for I/O and power connection. A housing ground terminal is not required due to non-metallic housing.

Controls


Multiturn ZERO and SPAN controls are provided to calibrate the instrument. The multiturn controls are accessible through the instrument front panel and are clearly marked for ease of use. Other internal range selection jumpers are provided for ease of field rangeability.

4.0 MAINTENANCE

These instruments are electronic and require no maintenance except periodic cleaning and calibration verification. If the unit appears to be mis-operating it should be checked as installed per section 6.0 or removed for a bench check per sections 6.0-7.0. MOST problems are traced to field wiring and/or associated circuits. If the problem appears to be with the instrument, proceed to sections 7.0.

5.0 CONNECTIONS

Standard connections are shown below and on the instrument face plate, Data Bulletin or on attached supplementary sheets.

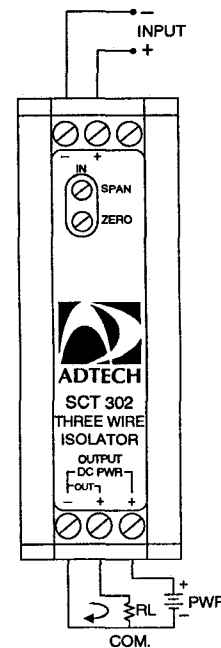

6.0 CONFIGURATION OF INPUT AND OUTPUT

All ADTECH units are factory calibrated per P.O. instructions. Usually, a complete recalibration is not required unless it is required to change input types, output types or the range of the unit. Most calibrations will only require a ZERO and SPAN fine adjustment.

NOTE: For recalibration to the existing range proceed to section 6.3; for new input or output range proceed as follows.

- A. Open the case to gain access to pcb boards. The larger pcb board is the input pcb and the smaller pcb is the output/power pcb.

6.1 INPUT CONFIGURATION

The ADTECH Model SCT 302L Isolated Voltage/Current Transmitter accepts both current and voltage inputs.

The SCT 302 has been set at the factory per the input/output marked on the label. It is easy to change the type of input. All inputs listed in Table 1 can be changed by simply selecting the appropriate header jumpers J2 to J8 on page 3.

6.2 OUTPUT CONFIGURATION

The output has been factory set as marked on the serial number tag. However, it is easy to change the type of output if so desired.

6.3 CALIBRATION

To perform a calibration check or re-calibration of the instrument follow this procedure.

- A. Make sure the unit I/O wiring is properly connected and that the correct power source per the label is also connected. The instrument must be at normal power for a minimum of 2 minutes before proceeding to B.
- B. The input signal source(s) must be adjustable from 0 to 100% in steps of 10% or at least 25%. The source(s) should be either precalibrated or an accurate meter must be used to monitor the input(s).
- C. The output may be monitored either as a direct voltage for a voltage output signal or as a current that can be read as a voltage across a resistor shunt e.g. 1-5 VDC across 250 ohms for 4-20 mA DC.
- D. Set the input source to minimum input value and adjust the multiturn potentiometer marked ZERO to provide the minimum calibrated output (e.g.) 4.00 ma \pm 0.01 ma dc. Note: For zero based outputs it is better to set input at 10% and adjust for 10% output for ZERO adjustment.
- E. Set the input source to maximum value and adjust the multiturn potentiometer marked SPAN to provide the maximum calibrated output (e.g.) 20.00 ma \pm 0.01 ma dc.
- F. Repeat steps D and E until readings are within calibration.
- G. The instrument should now be checked at 25-50-75% of span minimum for linearity.
- H. This completes the calibration.

7.0 FIELD TROUBLE SHOOTING GUIDE (300L Series)

This section offers a simple, first level trouble-shooting aid for an apparent instrument malfunction.

<u>SYMPTOM</u>	<u>CORRECTIVE ACTION</u>
----------------	--------------------------

- | | |
|-----------|--|
| No output | <ol style="list-style-type: none">1. Check the input and output connections carefully.2. Check that the power supply polarity is correct and that the output power is present on the indicated terminals.3. Check that the input source(s) is correct and that it changes magnitude between zero and full scale values when so adjusted.4. Make sure the output load is over 10kΩ and that the correct meter range is selected. |
|-----------|--|

All external checks are complete. Problem seems to be internal.

The instrument is made of small components. Troubleshooting beyond the above may be difficult without special equipment. We do not recommend attempting repair of the unit in the field. ADTECH offers a very responsive repair policy. Contact the ADTECH factory for information on repair and return at 716-383-8280 or 716-383-8386 (FAX).

8.0 TABLES, PCB LAYOUT

Standard Inputs/Outputs

TABLE 1-INPUT



INPUT	J2	J3	J4	J7	J8
4 – 20 mA	A	B	B	B	A
0 – 20 mA	A	B	A	B	A
0 – 10 mA	A	B	A	C	A
0 – 1 mA	A	B	A	D	A
±20 mA	D	A	A	B	A
±10 mA	D	A	A	C	A
±1 mA	D	A	A <td D	A	
1 – 5V	A	B	B	A	B
0 – 5V	A	B	A	A	B
0 – 10V	A	B	A	A	C
±5V	D	A	A	A	B
±10V	D	A	A	A	C

TABLE 2-OUTPUT

Output Range	J6
1-5V	J6-A
0-5 vdc	J6-B

Jumpers on larger pcb.

All jumpers located on larger pcb.

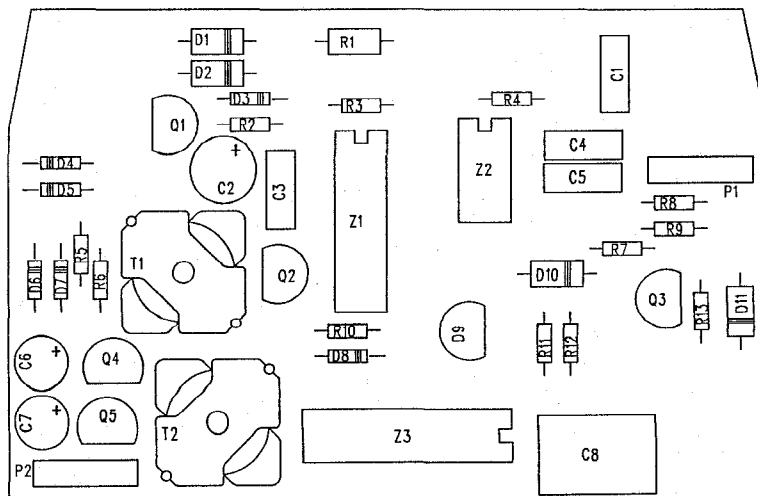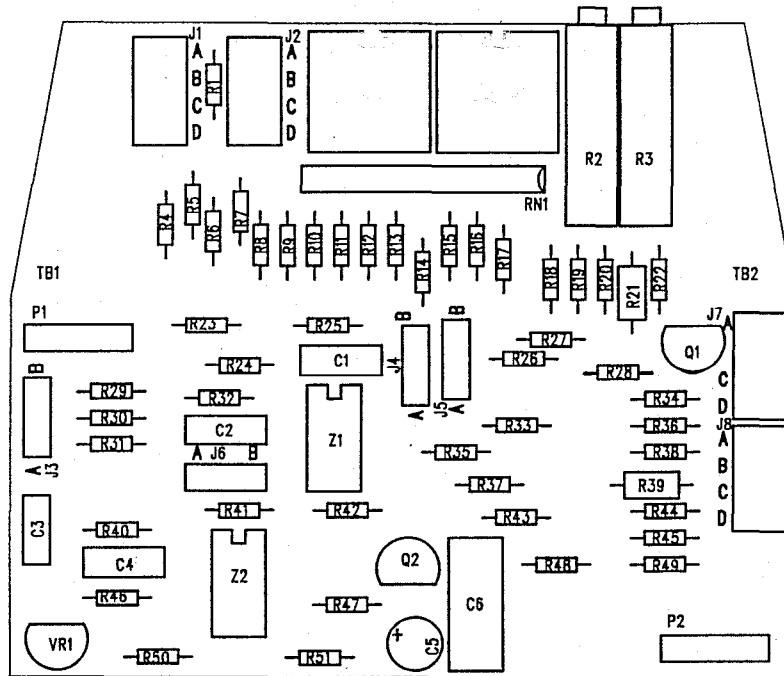

9.0 SPECIFICATIONS

INPUT/OUTPUT

INPUT SIGNALS

- a. 4-20 mA DC (z in 10 ohms)
- b. 0-20 or ± 20 mA DC (z in 10 ohms)
- c. 0-10 or ± 10 mA DC (z in 20 ohms)
- d. 0-1 or ± 1 mA DC (z in 200 ohms)
- e. 1-5 VDC (z in 1 megohm)
- f. 0-5 or ± 5 VDC (z in 1 megohm)
- g. 0-10 or ± 10 VDC (z in 1 megohm)
- h. Any zero or bipolar voltage from 100 mV to 200 VDC (option 1 14).

Zero Suppression: $\pm 10\%$

Span Adjustment: $\pm 10\%$

OUTPUT SIGNALS

0-5 VDC, 1-5 VDC

OUTPUT LOAD (RL) = 10k Ω min.

PERFORMANCE

- a. **Calibrated Accuracy:** $\pm 0.1\%$
- b. **Independent Linearity:** $\pm 0.025\%$ max., $\pm 0.01\%$ typical
- c. **Repeatability:** $\pm 0.005\%$ max. $\pm 0.002\%$ typ.
- e. **Zero TC:** $\pm 0.007\%$ of span max./ $^{\circ}$ C
- f. **Span TC:** $\pm 0.008\%$ of span max./ $^{\circ}$ C
- g. **Load Effect:** $\pm 0.005\%$ zero to full load
- h. **Output Ripple:** 10 mV P/P maximum
- h. **Response Time:** 110 milliseconds (10 to 90% step response)
- i. **Bandwidth:** (-3 db): 3.2 Hz
- j. **Temperature Range:** -25 $^{\circ}$ to 185 $^{\circ}$ F (-31 $^{\circ}$ to 85 $^{\circ}$ C) operating; -40 $^{\circ}$ to 200 $^{\circ}$ F (-40 $^{\circ}$ to 93 $^{\circ}$ C) storage
- k. **Power Supply Effect:** $\pm 0.005\%$ of span, max.
- l. **Isolation:** Input/output/case: 1000 VDC or 600 VAC

Note: All accuracies are given as a percentage of span

POWER

- a. 7-42 vdc: 3.5 mA typical, 5 mA max.

10.0 OUTLINE & MOUNTING

