



**ADTECH**  
 Analog-Digital Technology, Inc.  
 3750 Monroe Avenue  
 Pittsford, New York 14534-1302  
 (716) 383-8280 • FAX (716) 383-8386

# ADM 20

## Non-Isolated Amplitude Discriminator Module

### Instruction Manual

#### 1.0 INTRODUCTION

These instructions refer to the above model. Supplementary sheets are attached if the unit has special options or features. For detailed specifications, see page 4 or refer to the Data Bulletin. All ADTECH instruments are factory calibrated and supplied with a label detailing the calibration. Adjustments are normally not necessary. A simple check should be performed to verify calibration before installation to ensure that it matches the field requirement.

#### 2.0 GENERAL DESCRIPTION

The ADTECH ADM 20 is a Non-Isolated Amplitude Discriminator (High-Low Selector) Module that accepts multiple (two to four) process input signals of 1-5 vdc or 4-20 ma dc providing a single output representing either the "Highest" or "Lowest" signal levels of the inputs.

Power Option P 1 Non-Isolated 24 vdc provides negative output signal and negative DC power common rail connection.

The output is a true current source and provides process signals such as 4-20 ma, 0-1 ma, 0-10 ma, 1-5 ma and 10-50 ma dc or alternatively, a voltage signal of 5 vdc full scale. Other current and voltage **Inputs/Outputs (I/O)** are available as specified on the Data Bulletin.

#### 3.0 INSTALLATION

The instrument is supplied in a general purpose enclosure as standard. NEMA 4, 7 or 12 and plug in chassis enclosures are optionally available. Installation area/location must agree with the supplied instruments including operating temperature and ambient conditions.

##### Mounting

Refer to the appropriate outline drawing for mounting and clearance dimensions. The instrument is surface mounted with two #10-32 screws on 8.00 inch centers.

##### Electrical Connections

The wire used to connect the instrument to the control system I/O should be a twisted pair(s) and sized according to normal practice. Shielded cable is not normally necessary (if used, the shield must be grounded at the input negative of the ADTECH instrument and left floating at the sensor).

A 12 position barrier terminal block with #6-32 screws and 3/8" spacing is provided for I/O and power connection. A housing ground terminal marked G is also provided.

##### Controls


Multiturn ZERO and SPAN controls are provided to calibrate the instrument. The multiturn controls are accessible through the instrument front panel and are clearly marked for ease of use.

#### 4.0 MAINTENANCE

These instruments are electronic and require no maintenance except periodic cleaning and calibration verification. If the unit appears to be mis-operating it should be checked as installed per section 6.0 or removed for a bench check per sections 6.0-7.0. MOST problems are traced to field wiring and/or associated circuits. If the problem appears to be with the instrument, proceed to sections 6.0 and 7.0.

#### 5.0 CONNECTIONS

Standard connections are shown below and on the instrument face plate, Data Bulletin or on attached supplementary sheets.

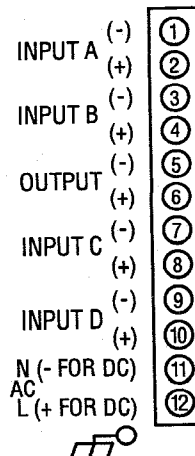

## 6.0 CALIBRATION

To perform a calibration check or re-calibration of the instrument follow this procedure.

- A. Carefully remove the instrument from the housing to gain access to the inside components observing normal safety and equipment precautions.
- B. Make sure the I/O wiring is properly connected and that the correct power source per the label is also connected. The instrument must be at normal power for a minimum of 2 minutes before proceeding to C.
- C. The input signal source(s) must be adjustable from 0 to 100% in steps of 10% or at least 25%. The source(s) should be either precalibrated or an accurate meter must be used to monitor the input(s).
- D. The output may be monitored either as a direct voltage for a voltage output signal or as a current that can be represented as a voltage across a resistor shunt.

### HIGH SELECT MODE

- E. Install a shorting link across all the unused inputs and also make sure J9 is in and J10 is deleted.
- F. Set all the input sources other than input A to the minimum input value.
- G. Set input source A to the minimum input value and adjust the multiturn potentiometer marked ZERO to provide the minimum calibrated output (e.g.)  $4.00 \pm 0.01$  ma dc.
- H. Set input source A to the maximum input and adjust the multiturn potentiometer marked SPAN to provide the maximum calibrated output (e.g.)  $20.00 \pm 0.01$  ma dc.
- I. Repeat steps G and H until the output readings are within calibration;  $\pm 0.1\%$  of span.
- J. Check the highest select function by setting input source A at the mid span value and increasing the other inputs one at a time above mid span value and confirm that the output follows the increasing input.

### LOW SELECT MODE

- K. Make sure jumper J10 is present and jumper J9 is deleted. (If there are unused inputs delete diodes CR7, CR8 for input C, CR2 and CR3 for input D).
- L. Set all input sources other than A to higher than the maximum input value.
- M. Set input source A to the minimum input value and adjust the multiturn potentiometer marked ZERO to provide the minimum calibrated output (e.g.)  $4.00 \pm 0.01$  ma dc.
- N. Set input source A to the maximum input and adjust the multiturn potentiometer marked SPAN to provide the maximum calibrated output (e.g.)  $20.00 \pm 0.01$  ma dc.
- O. Repeat steps M and N until the output is within calibration;  $\pm 0.1\%$  of span.
- P. Now check the lowest select function by setting input source A at the mid span value and decreasing the other inputs one at a time below the mid span and confirm that the output follows the decreasing input.
- Q. This completes the calibration.

#### NOTE:

If recalibration to a different input and/or output signal is required, proceed to the tables listed under Section 8.0.

## 7.0 FIELD TROUBLE SHOOTING GUIDE

This section offers a simple, first level trouble-shooting aid for an apparent instrument malfunction.

### SYMPTOM

### CORRECTIVE ACTION

- No output
1. Check the input and output connections carefully.
  2. Check that the power supply polarity is correct and that power is present on the instrument terminals.
  3. Check that the input source(s) is correct and that it changes magnitude between zero and full scale values when so adjusted.
  4. If the output is a current signal (4-20 ma, etc.), make sure the output loop is complete and that the correct meter range is selected.

All external checks are complete. Problem seems to be internal.

The following information is provided for a qualified technician or serviceman as check points for use in internal troubleshooting.

<u>CHECKPOINT/ COMPONENT</u>	<u>VOLTAGE/ RANGE</u>
(across) C11	$12 \pm 0.6$ vdc
(across) C12	$26 \pm 4$ vdc
(across) VR3	$6.9 \pm 0.35$ vdc
(across) R54	0.2 - 1 vdc

## 8.0 TABLES, PCB LAYOUT

### INPUT TABLE

INPUT SIGNAL FULL SCALE	INPUT SHUNT RI
50 ma dc	100 ohm, 1/2 W
20 ma dc	250 ohm, 1/2 W
10 ma dc	499 ohm
1 ma dc	4.99K ohm
10 vdc	See Note 1
5 vdc	None

All selected resistors are 1%, M.F.,  
1/4 W, 50 PPM, unless otherwise noted

NOTE 1: R40, R41, R45, R46 = 150 K; RC2,  
RC3, RC4, RC5 = 100 K; where RC2  
means add the resistor across C2 and  
so on.

### OUTPUT TABLE

OUTPUT SIGNAL FULL SCALE	OUTPUT SHUNT RL	FEEDBACK RES RF
50 ma dc	NONE	20 ohm
20 ma dc	NONE	49.9 ohm
10 ma dc	NONE	100 ohm
1 ma dc	NONE	1K ohm
10 vdc	604 ohm, 1/4 W	49.9 ohm
5 vdc	250 ohm, 1/2 W	49.9 ohm


All selected resistors are 1%, M.F., 1/4 W, 50 PPM, unless otherwise noted.

NOTE A: Components as shown may or may not be present on the p.c. board due  
to design updates or options.

ADM 20

RI = R57, 31, 60, 61

RL = R59

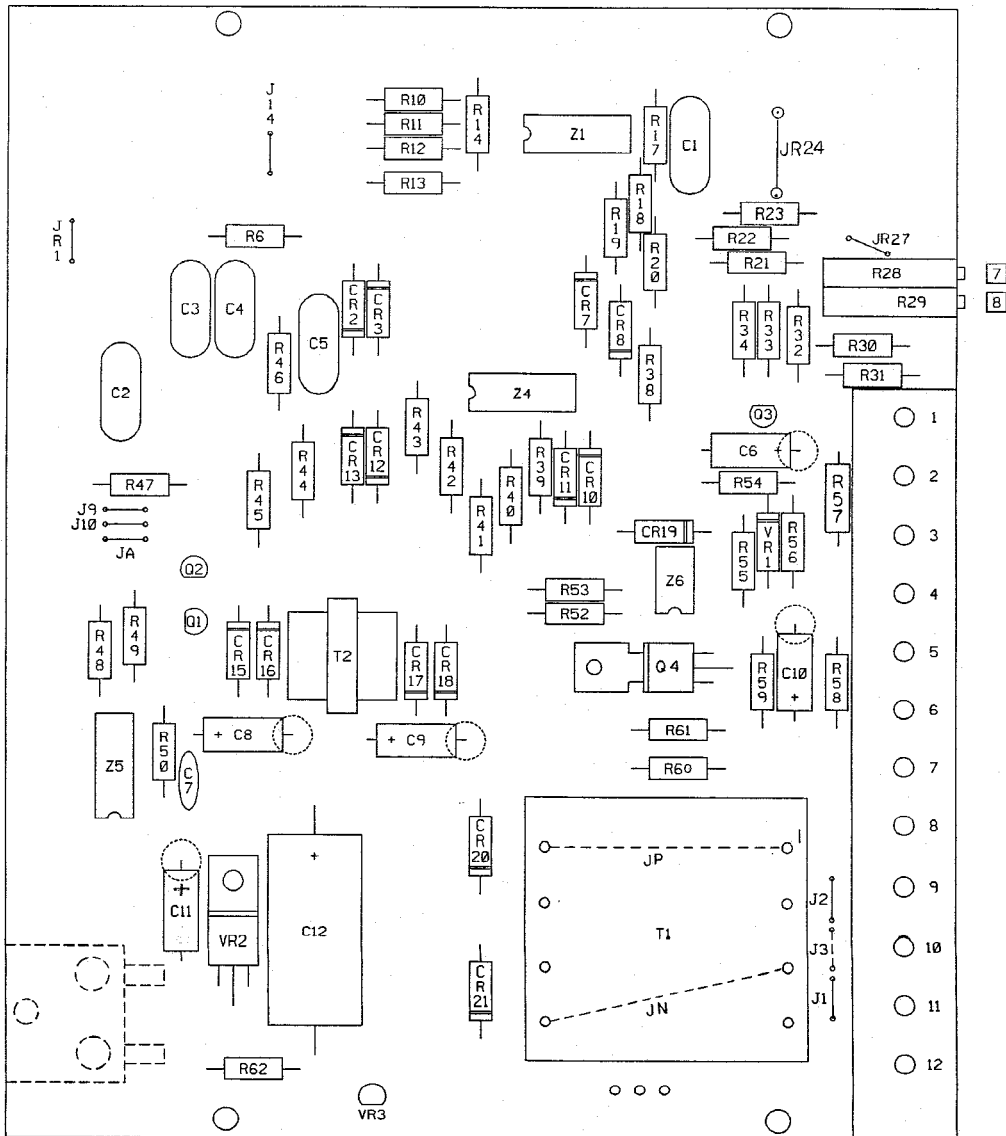

## 9.0 SPECIFICATIONS

### INPUT/OUTPUT

#### INPUT SIGNALS

- 4-20 ma dc (Z in 250 ohms)
- 10-50 ma dc (Z in 100 ohms)
- 0-1 ma dc (Z in 5K ohms)
- 0-10 ma dc (Z in 500 ohms)
- 1-5 vdc (Z in 10 megohms)
- 0-5 vdc (Z in 10 megohms)
- 0-10 vdc (Z in 100K ohms)
- Other zero based current and voltages available
- Low impedance current inputs, 1/10 standard (Option I 18)

#### OUTPUT SIGNALS/OUTPUT DRIVE

	AC Power	DC Power
a. 4-20 ma dc	0-1000 ohms max.	0-900 ohms max.
b. 10-50 ma dc	0-400 ohms max.	0-350 ohms max.
c. 0-1 ma dc	0-20,000 ohms max.	0-18,000 ohms max.
d. 1-5 vdc	250 ohms Z out	250 ohms Z out
e. 0-10 vdc	500 ohms Z out	500 ohms Z out

Zero based current and voltages in the above ranges are standard (e.g.) 0-20 ma, 0-5 vdc. Other voltage and currents optional.

#### PERFORMANCE

- Calibrated Accuracy:**  $\pm 0.1\%$
- Linearity:**  $\pm 0.1\%$  maximum,  $\pm 0.04\%$  typical
- Repeatability:**  $\pm 0.05\%$  maximum
- Temperature Stability:**  $\pm 0.01\%/^{\circ}\text{F}$  maximum,  $\pm 0.004\%/^{\circ}\text{F}$  typical
- Load Effect:**  $\pm 0.01\%$  zero to full load
- Output Ripple:** 10 mv P/P maximum
- Response Time:** 150 milliseconds
- Temperature Range:**  $0^{\circ}$  to  $140^{\circ}\text{F}$  ( $-18^{\circ}$  to  $60^{\circ}\text{C}$ ) operating  
 $-40^{\circ}$  to  $185^{\circ}\text{F}$  ( $-40^{\circ}$  to  $85^{\circ}\text{C}$ ) storage
- Power Supply Effect:**  $\pm 0.05\%$  for a  $\pm 10\%$  power variation

Note: All accuracies are given as a percentage of span

#### POWER

- 115 vac:  $\pm 10\%$ , 50/60 Hz, 3 watts, 0.7 Pf (standard)
- 24 vdc:  $\pm 10\%$  non-isolated, 3 watts (Option P1)
- 24 vdc:  $\pm 10\%$  isolated, 3 watts (Option P2)
- 48 vdc:  $\pm 10\%$  isolated, 3 watts (Option P3)
- 125 vdc: Nominal (105-140 vdc) isolated, 3 watts (Option P4)
- 230 vac:  $\pm 10\%$ , 50/60 Hz, 3 watts, 0.7 PF (Option P5)

## 10.0 OUTLINE & MOUNTING

